

**Telephone:**  
**Fax:**  
**VAT Registration No.:**

<b>Name:</b>		<b>Manufacturer:</b>	Daihatsu
<b>Address:</b>		<b>Model:</b>	
		<b>Year:</b>	
		<b>Registration:</b>	
<b>Tel - Private:</b>		<b>Mileage:</b>	
<b>Tel - Business:</b>		<b>Job number:</b>	

Trouble code	Fault location	Probable cause
1	No fault found	-
11	Voltage supply low/high	Poor earth connection(s)/overcharging
14	SRS control module voltage supply IG1	Open circuit
15	SRS control module voltage supply IG2	Open circuit
16	SRS warning lamp	Circuit fault
17	SRS control module	Incorrect SRS control module fitted
18	SRS control module - multi-plug	Incorrectly connected
21	Driver's airbag wiring	Open circuit
22	Driver's airbag	Voltage supply/short circuit
23	Driver's airbag voltage supply	Short circuit
24	Driver's airbag wiring	Short circuit
31	Passenger's airbag wiring	Open circuit
32	Passenger's airbag	Voltage supply/short circuit
33	Passenger's airbag voltage supply	Short circuit
34	Passenger's airbag wiring	Short circuit
41	Airbag wiring - Terios	Short circuit
41	Driver's seat belt pretensioner wiring	Open circuit
42	Airbag wiring - Terios	Voltage supply
42	Driver's seat belt pretensioner	Voltage supply
43	Driver's seat belt pretensioner voltage supply	Short circuit
44	Driver's seat belt pretensioner wiring	Short circuit
61	Airbag deployed	Replace airbag/SRS control module
62	SRS control module	Replace control module
71	LH side airbag, wiring	Short circuit
72	LH side airbag, wiring	Short circuit
73	LH side airbag, wiring	Short circuit
74	LH side airbag, wiring	Open circuit