

SERVICE MANUAL



Chassis

FOREWORD

This service manual describes the newly-developed Model M200 series. The entire portion, which is Chassis section for the Model M200 series, is divided into 19 sections in this manual. Each section has an index along with a table of contents in the beginning. For the check and repair procedures of the engine, refer to the service manual for the relevant engine type (Type K3 Engine manual and Type EJ Engine manual).

All information used in this service manual was in effect at the time when the manual was printed. However, the specifications and procedures may be revised owing to continuing improvements in the design without advance notice and without incurring any obligation to us.

Published in September, 2000

DAIHATSU MOTOR CO., LTD.

No.9741-ME

©2000 DAIHATSU MOTOR CO., LTD.

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Daihatsu Motor Co., Ltd.

CHASSIS

GENERAL INFORMATION	GI
MAINTENANCE	MA
CLUTCH	CL
MANUAL TRANSAXLE	MT
AUTOMATIC TRANSAXLE	AT
DIFFERENTIAL	DF
TRANSFER	TF
ENGINE MOUNTING	MTG
FRONT AXLE & SUSPENSION	FS
REAR AXLE & SUSPENSION	RS
DRIVE SHAFT & PROPELLER SHAFT	DPS
STEERING	SR
BRAKE	BR
ABS	ABS
BODY	BBE
BODY ELECTRICAL SYSTEM	BE
HEATER & AIR CONDITIONER	AC
SRS AIR BAG SYSTEM	AB
IMMOBILAZER SYSTEM	IMB